

 
■NOTES

- Unplug the instrument when not in use.
- When storing the unit for long periods of time, disconnect the battery.
- You will hear some loss of level and distortion when the battery begins to run down.
- When using external power source, we recommend you use Ibanez AC adaptor AC-109.
- Do not remove the screws on bottom.

■SPECIFICATIONS


- | | |
|--------------------------|---|
| ● Input Impedance | 500K ohms |
| ● Output Impedance | 10K ohms |
| ● Maximum Output Level | 0 dBm |
| ● Maximum Gain | +45 dB |
| ● Equivalent Input Noise | -70 dBm (IHF-A) |
| ● Power Supply | One 9 Volt Battery
or external AC adaptor (AC-109) |
| ● Size | 125mm, 4.9" (D) x 70mm, 2.8"
(W) x 52mm, 2" (H) |
| ● Weight | 550 g, 1.2 lbs |

OWNERS MANUAL

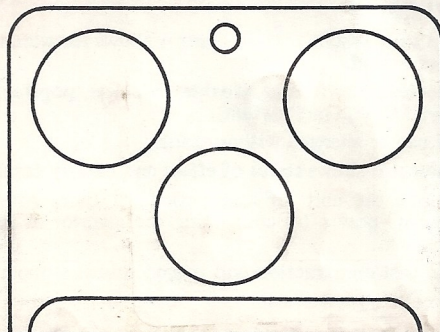

OVER DRIVE

 OD-850

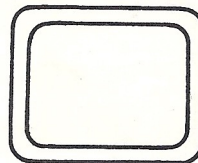


Ibanez

■FEATURES

- Provides long sustain. Tone control allows for wide range of distortion sound.
- FET electronic switching provides clickless, popfree switching. (Q-1 "Quiet One" switch)
- Battery can be changed without tools.
- LED indicator shows status of effect and battery condition.
- When using the unit for long periods of time, you can use external AC power by connecting the adaptor to the EXT. POWER jack.
- Zinc die cast construction and rugged rubber stopper assures durability.

 ■OPERATION

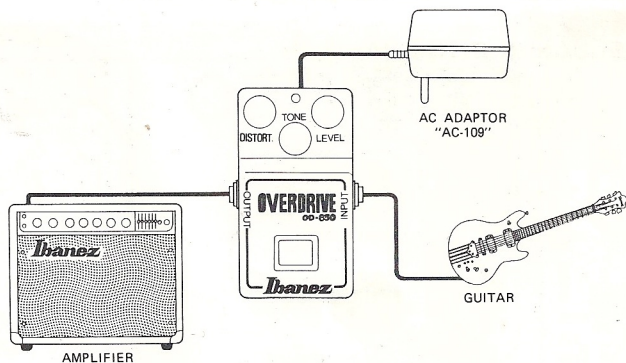

- ① Connect the input jack to your instrument. The circuit is automatically turned on when a plug is inserted.
- ② **DISTORTION** — Depth of the distortion is increased as control is turned CW (clockwise).
- ③ **TONE** — Controls amount of high frequency contour. Flat at center position. CW increases highs, CCW (counter-clockwise) decreases highs.
- ④ **LEVEL** — Varies output level. Usually set at 1:1, NORMAL/EFFECT.
- ⑤ Soft touch FET electronic switch changes EFFECT/NORMAL.
- ⑥ LED indicator comes on when effect is on. If it is dim or does not light, replace the battery.
- ⑦ **EXT D.C.** — When using external D.C. supply, internal batteries are switched off.

■CHANGING THE BATTERY

- ① Push the tab marked "OPEN" and lift up.
- ② Replace the battery as shown in figure 2.
- ③ Put the battery cover into the groove and push to the end.

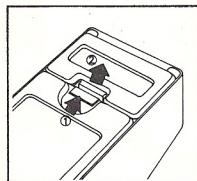 


Fig. 1

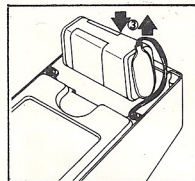 


Fig. 2

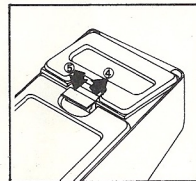 


Fig. 3