

NOTES

 
- Unplug the instrument when not in use.
- When storing the unit for long periods of time, disconnect the battery.
- You will hear some loss of level and distortion when the battery begins to run down.
- When using external power source, we recommend you use Ibanez AC adaptor AC-118.
- Do not remove the screws on bottom.

SPECIFICATIONS

- | | |
|--------------------------|---|
| • Input Impedance | 500K ohms |
| • Output Impedance | 10K ohms |
| • Maximum Input Level | +4 dBm |
| • Gain | 0 dB |
| • Delay Time | 3.2 – 8.5 m sec |
| • Speed Range | 0.3 – 3 Hz |
| • Equivalent Input Noise | -100 dBm (IHF-A) |
| • Power Supply | Two 9 Volt Batteries
or external AC adaptor (AC-118) |
| • Size | 125 mm, 4.9" (D) x 70 mm, 2.8"
(W) x 52 mm, 2" (H) |
| • Weight | 570 g, 1.3 lbs |

© 1980-6 MI-CS0202 Printed in Japan


OWNERS MANUAL

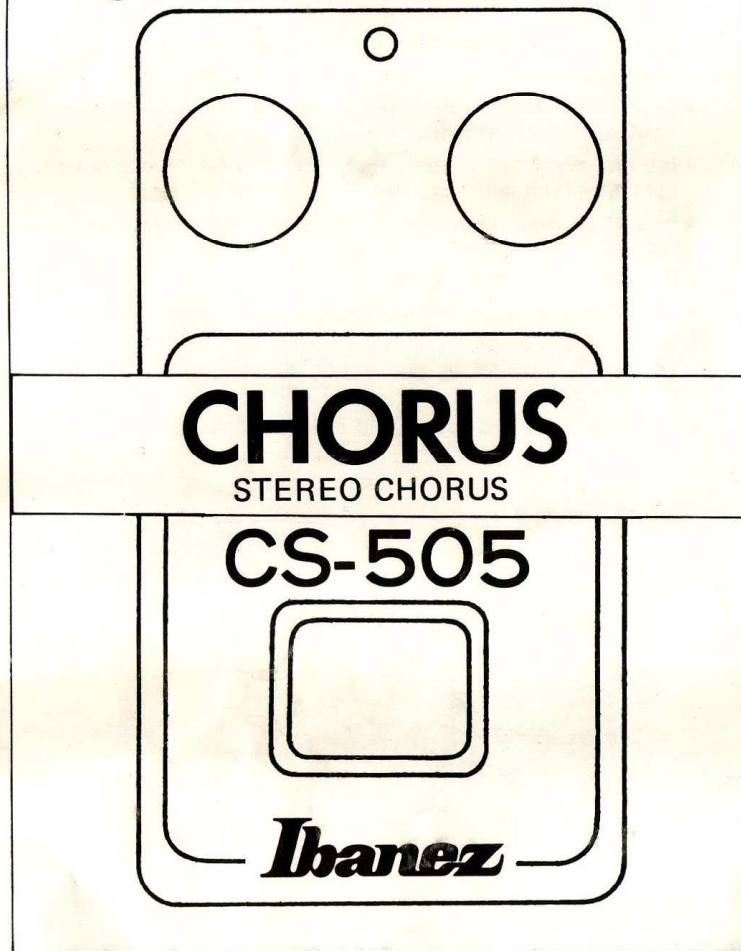

FEATURES

- Studio chorus effects in a rugged, compact package.
- Dual output for spacy stereo effects with two amplifiers.
- Low noise BBD contributes to extremely quiet operation, -100 dBm (IHF-A) S/N.
- Internal regulated power supply provides stable, dependable operation even with batteries.
- FET electronic switching provides clickless, popfree switching. (Q-1 "Quiet One" switch)
- Battery can be changed without tools.
- LED indicator shows status of effect and battery condition.
- When using the unit for long periods of time, you can use external AC power by connecting the adaptor to the EXT. POWER jack.
- Zinc die cast construction and rugged rubber stopper assures durability.

 OPERATION

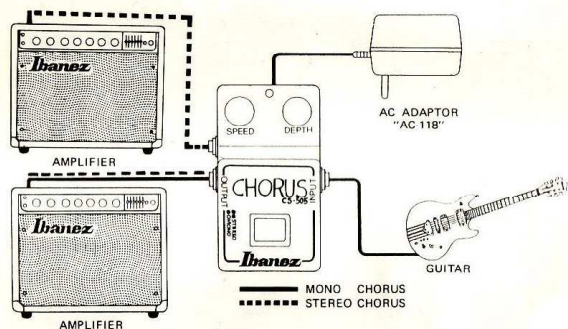

- ① Connect the input jack to your instrument. The circuit is automatically turned on when a plug is inserted.
- ② SPEED — Adjusts the rate at which the time delay varies.
- ③ DEPTH — Controls the amount of time delay shift.
- ④ Soft touch FET electronic switch changes EFFECT/NORMAL.
- ⑤ LED indicator comes on when effect is on. If it is dim or does not light, replace the battery.
- ⑥ EXT D.C. — When using external D.C. supply, internal batteries are switched off.

(Stereo)

- ⑦ One amplifier carries the delay sound. The other amplifier carries the dry sound. Together they produce a stereo effect.

CHANGING THE BATTERY

- ① Push the tab marked "OPEN" and lift up.
- ② Replace the battery as shown in figure 2.
- ③ Put the battery cover into the groove and push to the end.

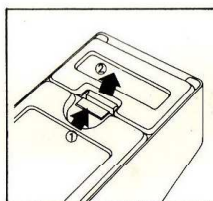 


Fig. 1

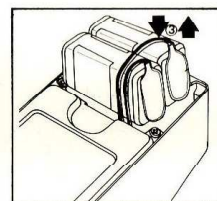 


Fig. 2

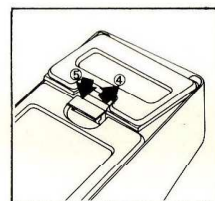 


Fig. 3