

■ SPECIFICATIONS

- Input Impedance 500k ohms
- Output Impedance Less than 10k ohms
- Input Noise -100 dBm (IHF-A)
- Input/Output Level 1 : 1
- Power Supply Two 9 Volt batteries
or external AC adapter.
- Size 112mm, 4.4" (D) × 61mm, 2.4" (W)
× 52mm, 1.4" (H)
- Weight 320g, 0.7 lbs

Ibanez®

CHORUS

CS-505


INSTRUCTION MANUAL

■ FEATURES

- Compact, rugged case.
- Stereo outputs for use with two amps.
- Low noise BBD variable delay and noise reduction circuit provide quiet operation.
- Battery or external power operated. Regulated power supply for stable chorus effect.
- Noiseless, pop-free FET switching.
- LED effect status and battery condition indicator.


■ CONNECTION DIAGRAMS

● STANDARD

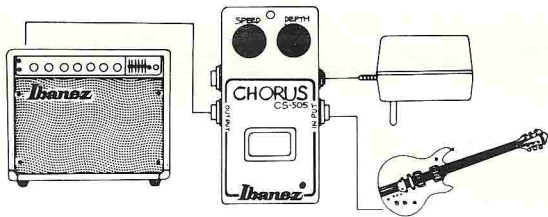

- ① Connect output jack of CS-505 to amp, connect input to instrument. The CS-505 automatically switches on when plug is inserted.
- ② Speed Control—Adjusts automatic sweep speed of chorus. CW (clockwise) increases speed.
- ③ Depth Control—CW increases the depth of the chorus effect.
- ④ Footswitch—Effect on/off.
- ⑤ LED Indicator—Shows when effect is on. When LED becomes dim, change the batteries.
- ⑥ EXT D.C.—When using external D.C. supply, internal batteries are switched off.

● STEREO CHORUS

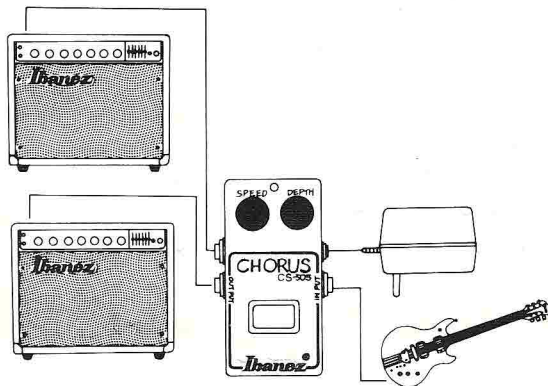

- ⑦ Stereo Operation—Plug the other output into a second amp for special stereo chorus effects.

■ CHANGING BATTERIES

The CS-505 is powered by two 9 Volt batteries. To replace, remove the four screws on the bottom of the unit and take off. Use proper screwdriver to avoid damage.

■ NOTES

- Unplug the instrument when not in use.
- When storing the CS-505 for long periods, remove the batteries.
- When the batteries run down to a certain point, you may hear some distortion and loss of level.