

PHASE TONE PT-909

SPECIFICATIONS

PEDANCE IM OH	ИS
IMPEDANCE · · · · · less than 5K OHI	VIS
ENT INPUT NOISE80	db
	mm
	Og
1 E	MPEDANCE IM OHI IMPEDANCE less than 5K OHI I INPUT LEVEL Od ENT INPUT NOISE80 (input shorted IHF A curry Ipc 9v 00 Ipc 9v 00 I I mm×60mm×36

OPERATING INSTRUCTIONS

FEATURES

- The Ibanez PT-909 is equipped with the newest circuit board available. The PT-909 provides a clean phase sound and low distortion and incorporates three controls for sound selection.
- Built in LED light indicator—This feature eliminates the miss setting of the unit while in use.
- The light indicator doubles as a battery checker, so there is no worry involved with the battery running down.
- The case is made from durable, die-cast aluminum for easy carrying.

OPERATION

- (1) First, connect the output of your instrument to the input of the PT-909. Next, connect the output of the PT-909 to the input of your amplifier. Connecting the instrument automatically turns the circuit on.
- (2) Speed control Controls the speed of the phasing. The speed is increased by turning the knob clock-wise.
- (3) Width control Controls the amount of phase shifting. Phase shifting is increased by turning the knob clockwise.

- (4) Feedback Turning the knob clockwise increases the phase effect with accentuated highs and lows.
- (5) Normal / effect switch Pushing the switch turns the effect on and off.
- (6) LED light indicator is on when the switch is pushed on. It also indicates the battery's consumption. If the light is dim or there is no light, the battery needs to be replaced.

CHANGING THE BATTERY

To replace the battery, remove the four screws on the back of the unit. The battery is connected with a convenient clip.

Please use the right size screwdriver to eliminate damage to the screws.

IMPORTANT

- Unplug the instrument when not in use.
- Disconnect the battery when storing the unit for long periods of time.
- Replace the battery when the sound begins to get weak.